



# PG Board TAF™ Installation Guidelines

*(Reference PG Board TAF Ppt. presentation for additional installation information)*

**Note: Minimum 5 fasteners per board recommended.**

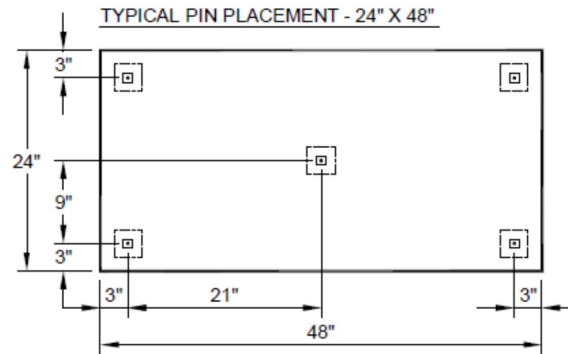


- Before starting installation, confirm substrate is clean of contaminants.
- Measure spacing to mark correct fastener locations according to the prescribed pattern. Typically 3" in from each corner and at panel center.

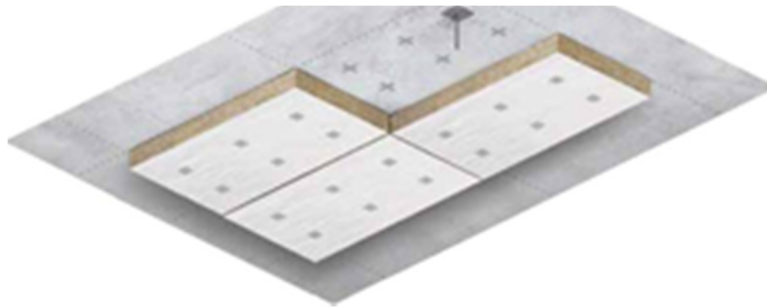


## Using Traditional Insulation Fasteners


- Install fasteners to substrate using appropriate substrate attachment method according to fastener manufacturer's recommendations. It is recommended that a random sampling of fasteners be tested to confirm adequate substrate attachment.
- Install the PG Board TAF onto mechanical fasteners. Confirm panel alignment with fastener spacing and adjacent panels.

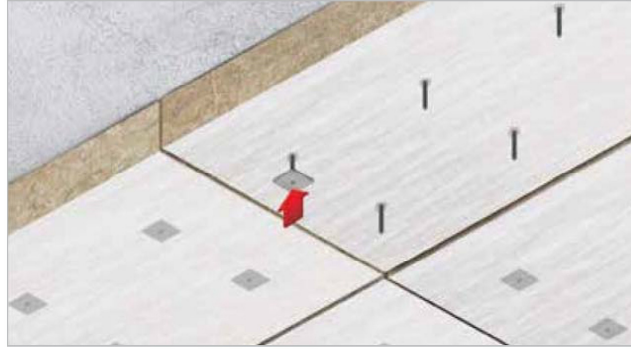

- Avoid pillowing of facer material around fasteners. **Do Not** over-compress the insulation when installing insulation fasteners or lock washers.

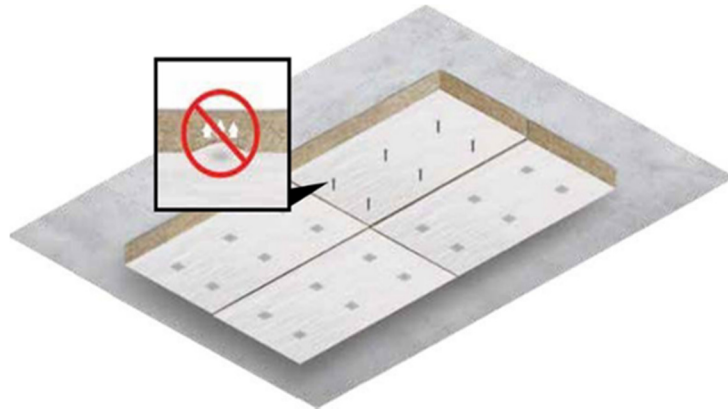

- Secure the washer on the exposed end of the mechanical fastener.
- Nip off any protruding fastener end to prevent injury and provide a clean, finished appearance

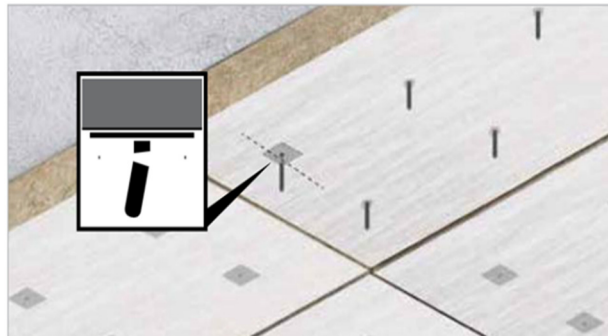

## Using fasteners that install through the panels to the substrate

- Use correct fastener for the substrate per fastener manufacturer. Use correct fastener length to prevent pillowing of the facer material around the fastener.
- Before applying tape, lightly clean the board facing to remove contaminants from the surface.
- Apply PG Board TAF system tape per manufacturer's recommendations. Tape may be applied to system joints and over fasteners / washers per the project Architect's direction.

