


# PANEL FABRIC DOWN

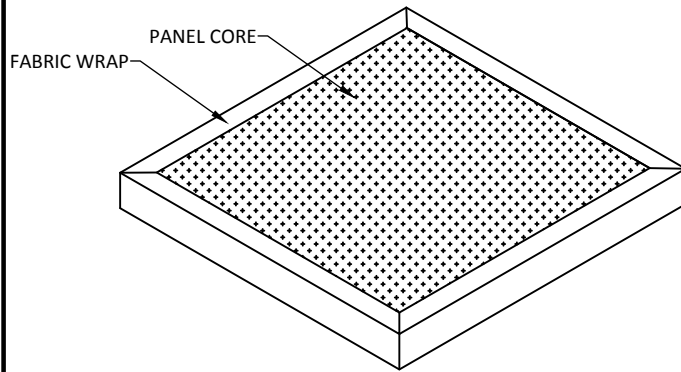


## INSTRUCTIONS

1. PEEL FABRIC BACK PAST DESIRED CUT LINE (USE HEAT GUN TO SOFTEN FABRIC ADHESIVE).

REVISIONS				
ZONE	REV	DESCRIPTION	DATE	APPROVED

**NOTE**  
ALL WORK TO BE DONE ON CLEAN, SMOOTH SURFACE.


# PANEL FABRIC UP

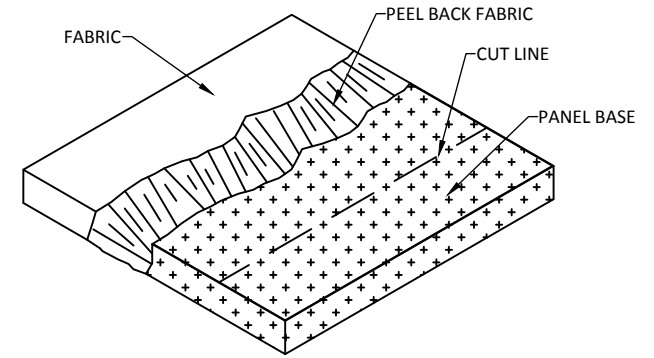

## INSTRUCTIONS

2. CUT PANEL, WITH FABRIC FACE UP, USE A STRAIGHT EDGE AND RAZOR KNIFE. (BE CAREFUL NOT TO CUT FABRIC)


# PANEL FABRIC UP

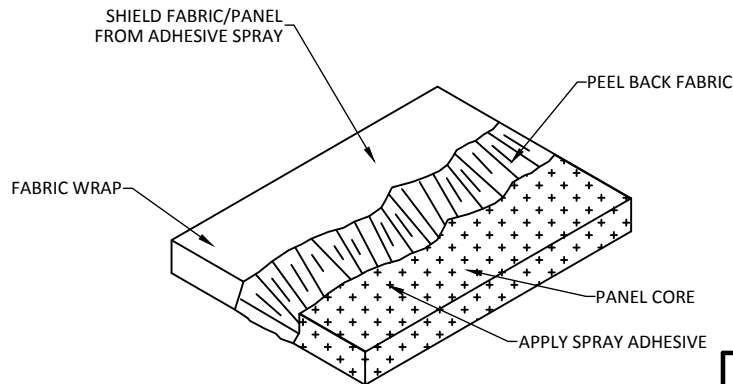

## INSTRUCTIONS

3. APPLY ADHESIVE TO EXPOSED BASE AND REWRAP FABRIC. (FIELD APPLICATIONS REQUIRE 1" MINIMUM FABRIC RETURN TO BACK OF PANEL)

# PANEL FABRIC DOWN

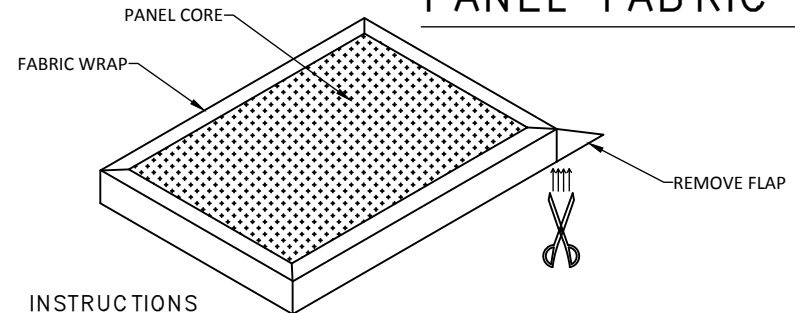

## INSTRUCTIONS

4. PINCH EXCESS FABRIC TOGETHER AT PANEL CORNERS AND CAREFULLY TRIM EXCESS FABRIC.



ABSORPTION PLUS PANEL  
IMPACT PANEL

FIELD CUT PANELS

FEB. 16, 2012	SIZE A	FSCM NO.	DWG NO. 20000368	REV 1
	SCALE N/A	DRWN ZCH	SHEET 1 OF 1	