




REVISIONS		DESCRIPTION	DATE	APPROVED
ZONE	REV			

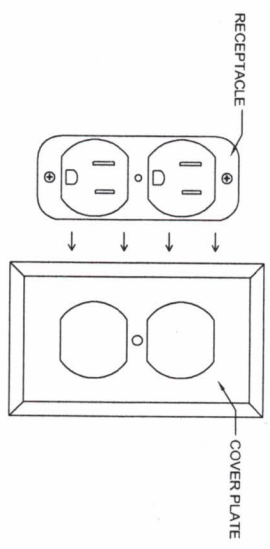


REMOVE OUTLET COVER PLATE AND MOVE RECEPTACLE OUT FROM WALL.

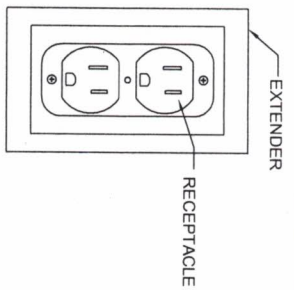


INSTALL OUTLET EXTENDER TO WALL OUTLET BOX PER MANUFACTURER'S INSTRUCTIONS.

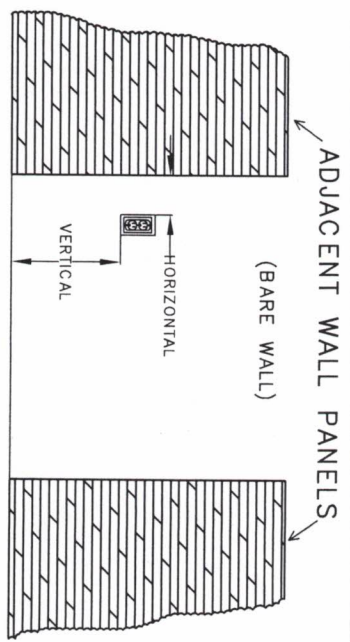


MEASURE LOCATION OF EXTENSION ON THE WALL AND TRANSFER THESE DIMENSIONS TO THE BACK OF THE WALL PANEL...

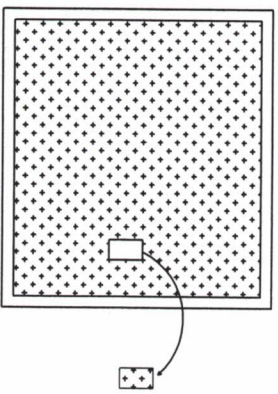

REMOVE FIBERGLASS TO THE OUTLINE OF THE BOX EXTENDER WITH UTILITY KNIFE BEING CAREFUL NOT TO CUT FABRIC.

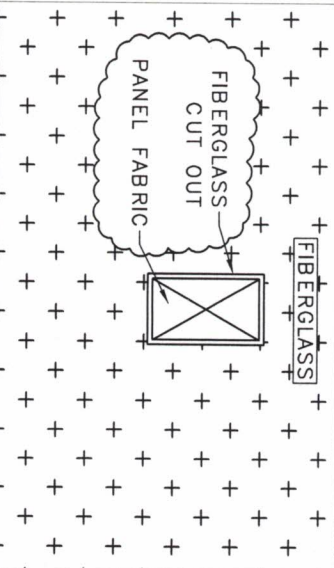

CUT "X" IN FABRIC. SPRAY FABRIC WITH ADHESIVE. PULL FABRIC THROUGH AND ADHERE TO BACK OF PANEL.

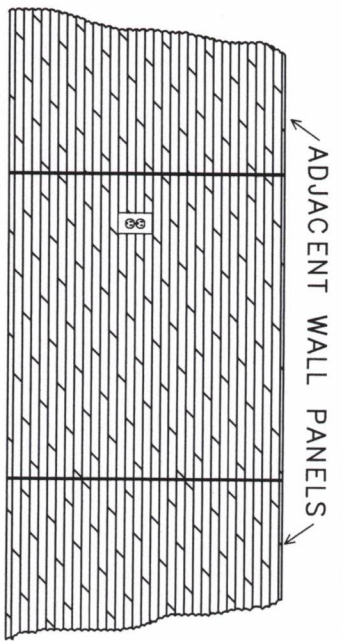

ATTACH PANEL TO THE WALL TO CLEAR OUTLET EXTENSION. INSTALL A LARGER COVER PLATE THAN ORIGINAL. RESTORE POWER TO THE OUTLET.

SHUT OFF POWER BEFORE WORKING ON ELECTRICAL OUTLETS.



ABSORPTION PLUS PANEL
IMPACT AND TACK PANEL
FIELD CUTOUTS FOR
ELECTRICAL RECEPTACLES

SIZE	FSCM NO.	DWG NO.	REV
A		20000365	2
SCALE	DRWN	ZCH	SHEET 1 OF 1
N/A			

FEB. 13, 2012