


REVISIONS				
ZONE	REV	DESCRIPTION	DATE	APPROVED

## INSTALLATION DETAIL

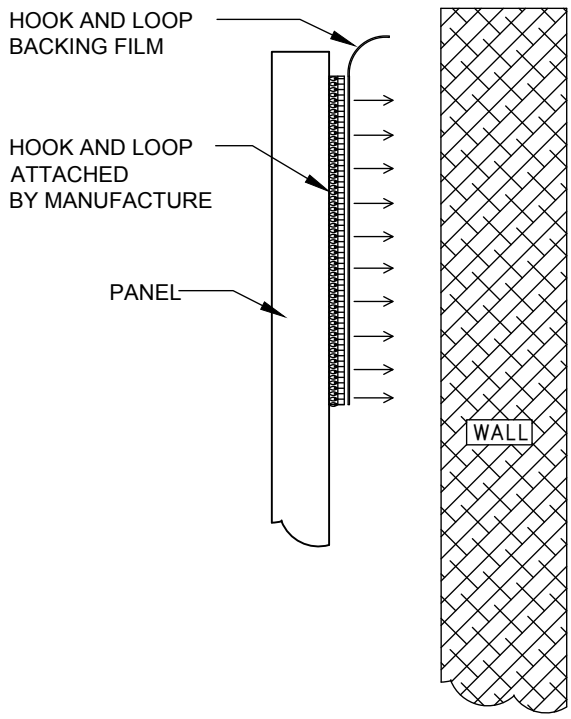


## WALL INSTALLATION INSTRUCTIONS

1. DETERMINE WHERE PANELS ARE TO BE INSTALLED
2. CLEAN SURFACES WHERE ADHESIVE BACKING WILL CONTACT
3. JOIN HOOK & LOOP ON PANEL BACK, REMOVE BACKING FILM FROM WALL MOUNTING STRIPS
4. LOCATE AND PRESS PANEL FIRMLY ON WALL, LET ADHESIVE CURE BEFORE TRYING TO REMOVE PANEL FROM WALL. SPI DOES NOT RECOMMEND THIS MOUNTING METHOD WHEN SURFACE IS BLOCK, BRICK, OR CONCRETE.
5. WHEN USING HOOK & LOOP, PANELS SHOULD BE SUPPORTED BY SUPPORT ANGLE MOLDING (SUPPLIED BY OTHERS), CAPABLE OF CARRYING FULL PANEL WEIGHT.

### NOTES

1. HOOK & LOOP PROVIDED BY SPI
2. TYPICAL HOOK & LOOP STRIPS TO BE 6 INCHES

	ABSORPTION PLUS PANEL IMPACT AND TACK PANEL			
	INSTALLATION INSTRUCTIONS HOOK & LOOP			
	SIZE A	FSCM NO.	DWG NO. 20000363	REV 4
JAN. 12, 2012		SCALE N/A	DRWN ZCH	SHEET 1 OF 1