



1

Z-CLIPS ARE SHIPPED LOOSE IN 2 PARTS - ONE FLAT PIECE TO BE SCREWED INTO THE WALL AND ONE PIECE WITH IMPALING PRONGS TO MOUNT INTO BACK OF PANEL.

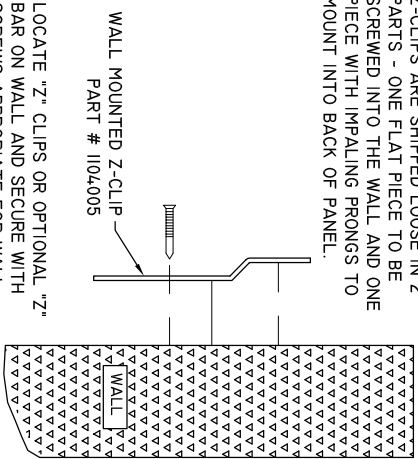


2

HANG IMPALING CLIP ON THE WALL MOUNTED Z-CLIP

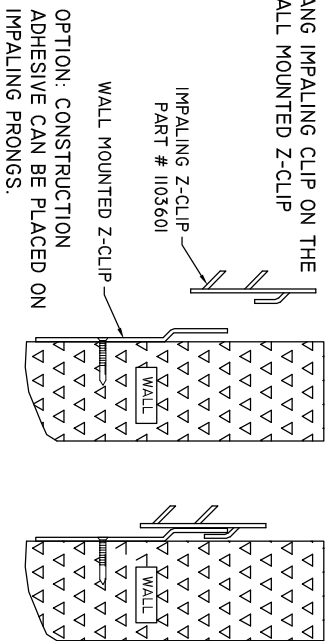


3

PRESS PANELS ONTO THE IMPALING Z-CLIP AND PUSH DOWNWARD UNTIL (FIRMLY) SEATED.

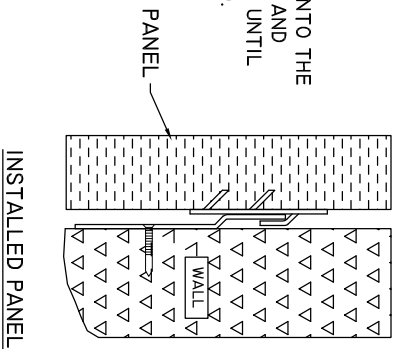

REVISIONS				
ZONE	REV	DESCRIPTION	DATE	APPROVED

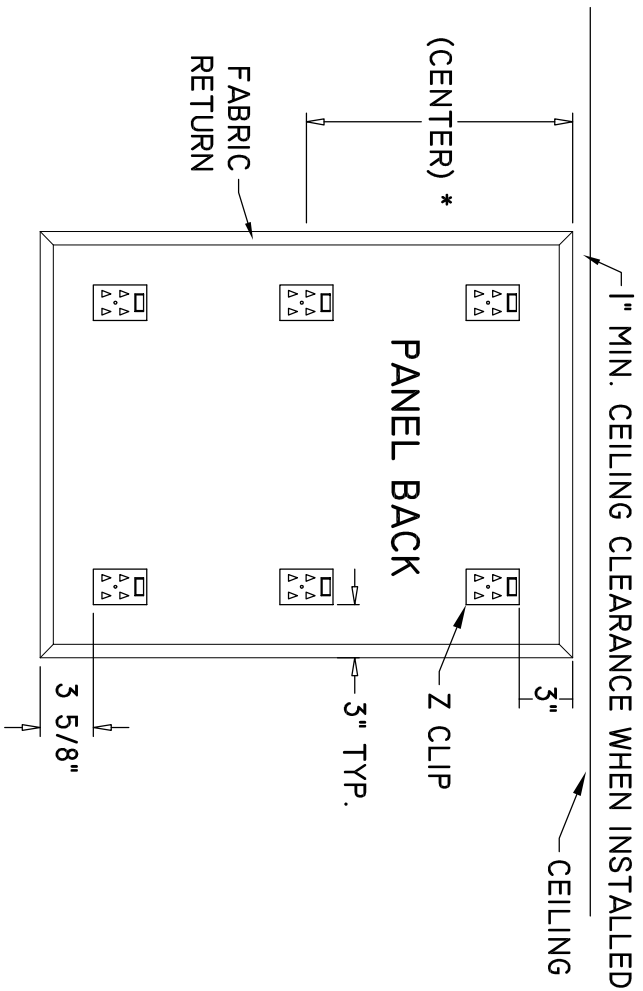

* - PANELS OVER 5' HIGH OR WIDE REQUIRE (6) "Z" CLIPS. SMALLER PANELS REQUIRE (4) "Z" CLIPS.

PANEL MOUNTED Z-CLIP PLACEMENT



**ABSORPTION PLUS PANEL
IMPACT AND IMPALE METHOD
INSTALLATION INSTRUCTIONS
WITH Z-CLIP IMPALE**

DEC. 21, 2018	SCALE N/A	DRWN ZCH	SHEET 1 OF 1	REV 6
SIZE A	FSCM NO. 20000358	DWG NO. 20000358		